




Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India
P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com

- Faridabad • Kolkata • Mumbai • Pune • Ahmedabad
- Chennai • Bangalore • Hyderabad



Bottle Perpendicularity Tester

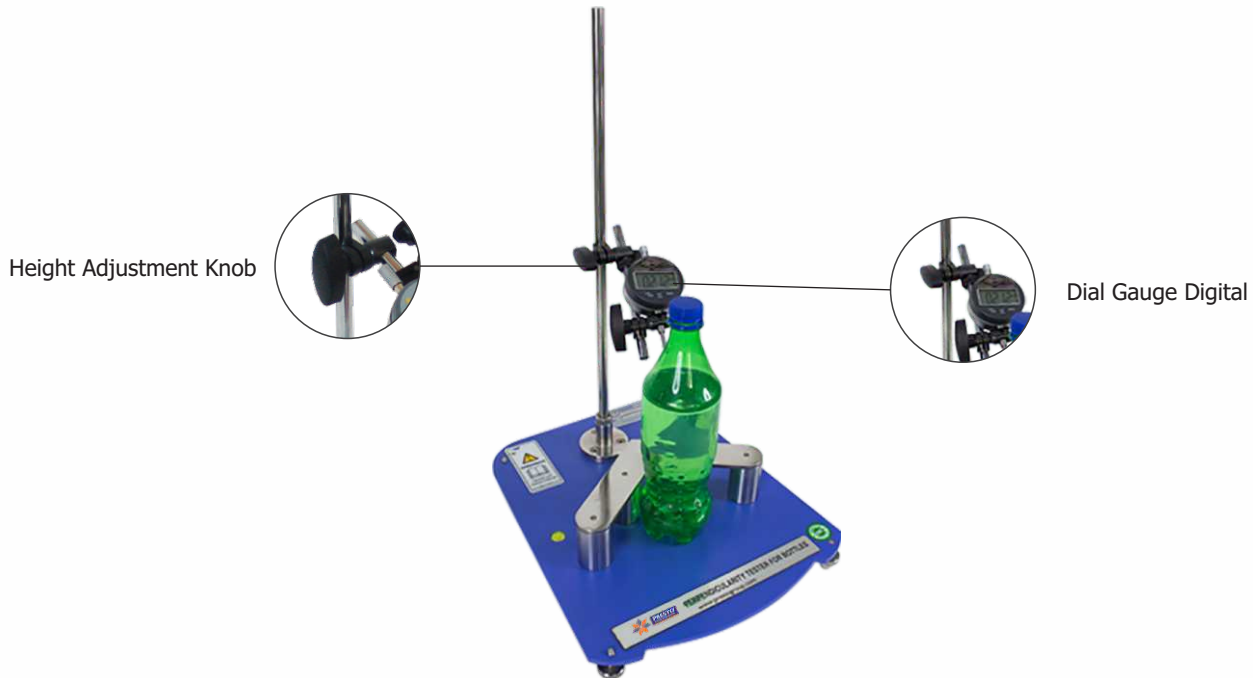

Model No. PPTB - 0109

Bottle Perpendicularity Tester is a consistent tool that helps the manufacturer in testing the perpendicularity of PET Bottles or Blow molded containers. It is based on the principle to test the accuracy of the shape and size of bottle.

- Easy and accurate readout
- Comes with Zero Tolerance
- Adjustable measurement operations
- Repeatability in test measurements of bottles/blow molded containers

With Bottle Perpendicularity Tester, PET Bottle/Container Perpendicularity is checked as it depends upon the shape, size and quality of product. It has a basic turntable where the test specimen is placed and rotated with a probe checking the differential in movement.



Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India
P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com

- Faridabad • Kolkata • Mumbai • Pune • Ahmedabad
- Chennai • Bangalore • Hyderabad



Key Specifications:

Range	0 – 10 mm
Least count	0.001 mm
Display	LCD (Digital)

Highlights:

Gauge	1
Bottle Size	Upto 2.5 litres (max height of bottle 350mm & Dia 130 mm)
Linearity Check	± 0.010 mm with slip gauge
Foot reset	Adjustable
Arm	Adjustable flexible arm

Comes with height adjusting knob to adjust the height of gauge. Highly accurate and reliable instrument to measure the Perpendicularity of Bottles/Containers.

Thank you customers for choosing us as your partners in growth !



*All the above logos are the sole property of their respective owners and are used purely for depiction purposes only.

OUR OTHER PRODUCTS :-

					
Top Load Tester	Wall Thickness Gauge	Gloss Meter Triangle	Eccentricity Tester	Moisture Analyzer MB 45	Preform Neck Cutter