



# Presto Stantest Pvt. Ltd.


I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India  
P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com

- Faridabad • Kolkata • Mumbai • Pune • Ahmedabad
- Chennai • Bangalore • Hyderabad



MOST  
ADVANCED  
& STABLE  
INSTRUMENTS  
IN INDIA


## Cobb Sizing Tester

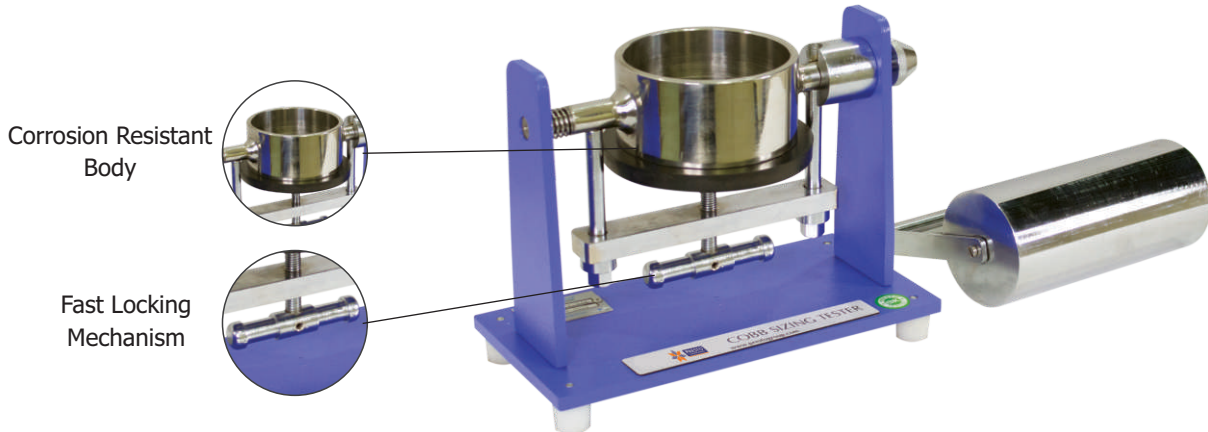


### Model No. PCS - 23

**Cobb Sizing Tester** is a consistent tool useful for checking the water absorptiveness (Cobb value) of a given test sample. Used to check the quantity of water absorbed by various sample like paper, cardboard, corrugated sample in a given time rapidly and accurately. PRESTO Cobb Sizing Tester is designed as per standards IS 1060, TAPPI –T441.


- High Quality rugged structure with corrosion resistant main body
- Light weight and resilient
- Fast Locking Mechanism
- Single handed hassle free operation
- Highly accurate test results
- High Grade stainless steel test area
- Quick Clamping Grip
- Non absorbent soft rubber pad to avoid lateral water seepage

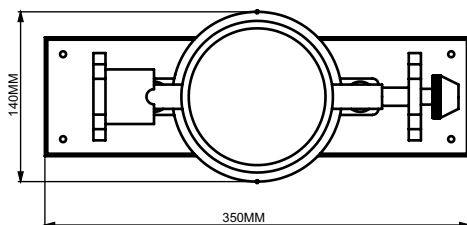

Top View

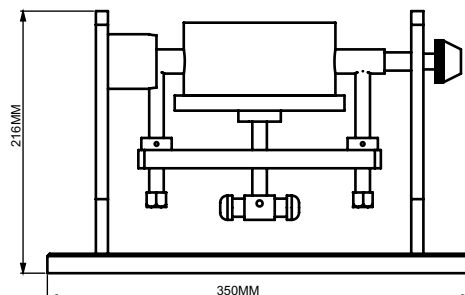

Front View

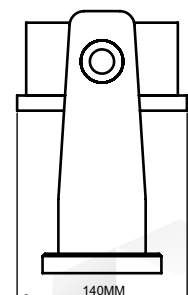

Side View



# Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India  
P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com

- Faridabad • Kolkata • Mumbai • Pune • Ahmedabad
- Chennai • Bangalore • Hyderabad



## Key Specifications:

Sample Diameter	130 mm (approx)
Depth of cylinder	60 mm
Diameter of rubber pad	145 mm $\pm$ 1 mm
Water level indicator in cylinder	10 mm and 25 mm
Weight of roller	10Kg (approx)
Roller length	163 mm $\pm$ 1 mm

## Highlights:

No. of Roller	1
Locking screw	Yes
Material of Main Body	Stainless Steel / mild steel

Used in various Industries like paper and packaging, textile, films, foils etc.

## Optional Features:

Combine with Digital Weighing balance for a complete Kit.

Thank you customers for choosing us as your partners in growth !



\*All the above logos are the sole property of their respective owners and are used purely for depiction purposes only.

## OUR OTHER PRODUCTS :-

