



# Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India  
P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com  
• Faridabad • Kolkata • Mumbai • Pune • Ahmedabad  
• Chennai • Bangalore • Hyderabad



## Peel Strength Tester Digital with NITRO LCD




Model No. PPSS-2000

**Peel Strength Tester** is a consistent tool to quantify the permanence of adhesion or peel ability of self-adhesive pressure sensitive materials. PRESTO Peel Adhesion Tester is manufactured under test standard ASTM D 903.

Available in Computerized model also.

- Microprocessor based LCD display for accurate test results  $\pm 1\%$
- After completion the test auto home return
- Highly accurate test results under force.
- Strong gripping clamps to perform Peel test at 180°.
- Bright LCD display
- Inbuilt calibration facility
- Feather touch controls

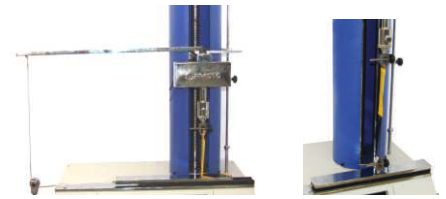


90° fixture

180° fixture

- 90 degree fixture (Optional) - Available on request

Peel Strength Tester reveals the peeling strength force required to remove pressure sensitive coated material, which has been applied to standard test specimen under specified conditions from the plate at a specified angle and speed.

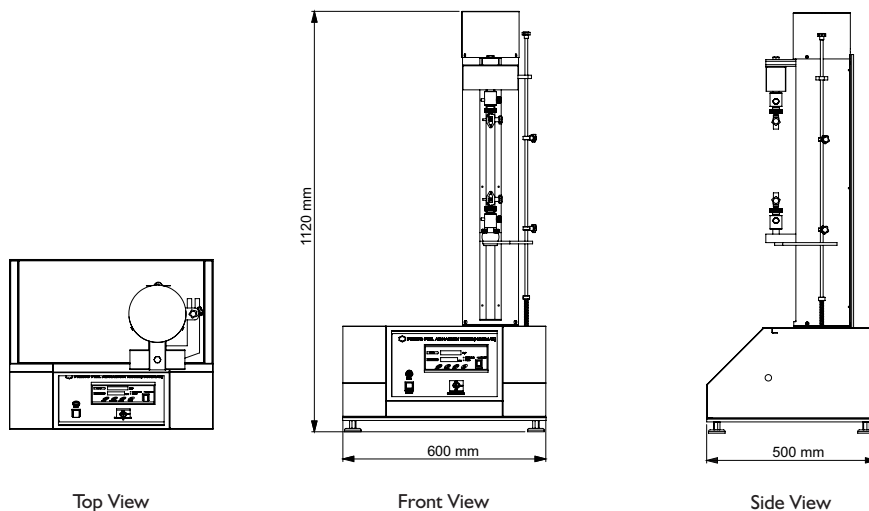

Top View

Front View

Side View



# Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India  
 P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com

- Faridabad
- Kolkata
- Mumbai
- Pune
- Ahmedabad
- Chennai
- Bangalore
- Hyderabad



## Key Specifications:

Load Cell Capacity	20 Kgf
Display	Digital LCD Display
Accuracy	± 0.5 % at full load (with master load)
Least Count/Resolution	0.005 Kgf
Power	220V , Single phase, 50 Hz
Test Speed	300 mm/min ± 5%
Memory	After perform the test max. value save in memory
Grip Separation	Min. 25 mm & Max. 300 mm

## Highlights:

Auto Test Stop	Yes
Auto Home Return	Yes
Safety Switch	Yes
Material	Mild Steel
Finish	Powder coated Havel Gray & Blue combination finish and bright chrome / zinc plating for corrosion resistant finish
Dimensions	600x500x1120 mm

The Peel Strength tester measures the peeling strength required to peel of the laminates.

## Optional Features :

- Peel Tester Digital cum computerized models and Digital model (with or without printer facility) also available.
- VFD drive multi-speed facility also available (30-300 mm / min.)

Thank you customers for choosing us as your partners in growth !



\*All the above logos are the sole property of their respective owners and are used purely for depiction purposes only.

## OUR OTHER PRODUCTS :-

