



Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India


P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com

• Faridabad • Sonapat • Kolkata • Mumbai • Pune • Ahmedabad
• Chennai • Bangalore • Hyderabad

www.prestogroup.com



Preform Perpendicularity Tester

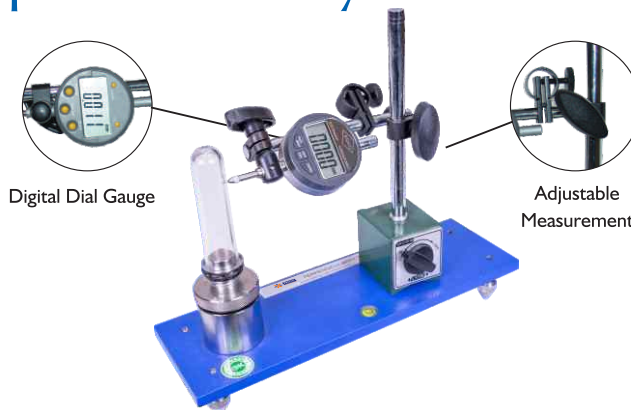

Model No. PPT - 0108

Preform Perpendicularity Tester is a consistent tool that helps the manufacturer in testing the perpendicularity of PET preforms. It is based on the principle to test the accuracy of the shape and size of preforms.

- Easy and accurate readout
- Comes with Zero Tolerance
- Adjustable measurement operations
- Repeatability in test measurements of preforms

With Preform Perpendicularity Tester, PET Preform Perpendicularity is checked as it is dependent upon the shape, size and quality of product. It has a basic turntable where the preform is placed and rotated with a probe checking the differential in movement.

Key Specifications:

Range	0 – 10 mm
Least count	0.001 mm
Display	LCD (Digital)
Preform Holder Diameter	As per requirement (Single holder part of supply)

Highlights:

Gauge	1
Dimensions	310 x 100 x 275 mm
Stand	Magnetic adjustable arm stand

**Various size preform holder diameter options available on requirement.

Comes with height adjusting knob to adjust the height of gauge. Highly accurate and reliable instrument to measure the Perpendicularity of Preforms.

Optional :

Preform holder different dia meter available on request.

Thank you customers for choosing us as your partners in growth !



*All the above logos are the sole property of their respective owners and are used purely for depiction purposes only.

OUR OTHER PRODUCTS :-

Top Load Tester	Wall Thickness Gauge	Gloss Meter Triangle	Eccentricity Tester	Moisture Analyzer MB 45	Preform Neck Cutter

