


# Bottle Perpendicularity Tester

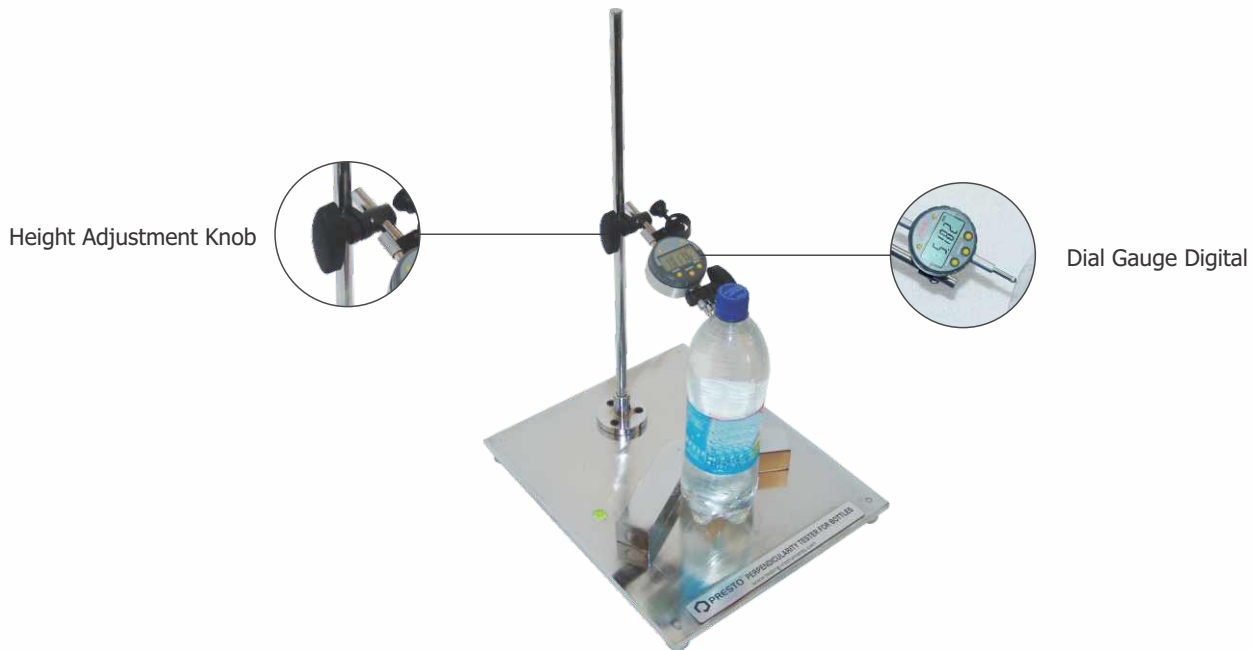

## Model No. PPTB - 0109

**Bottle Perpendicularity Tester** is a consistent tool that helps the manufacturer in testing the perpendicularity of PET Bottles or Blow molded containers. It is based on the principle to test the accuracy of the shape and size of bottle.

- Easy and accurate readout
- Comes with Zero Tolerance
- Adjustable measurement operations
- Repeatability in test measurements of bottles/blow molded containers

With Bottle Perpendicularity Tester, PET Bottle/Container Perpendicularity is checked as it depends upon the shape, size and quality of product. It has a basic turntable where the test specimen is placed and rotated with a probe checking the differential in movement.



### Key Specifications:

Range	0 – 10 mm
Least count	0.001 mm
Display	LCD (Digital)

### Highlights:

Gauge	1
Bottle Size	Upto 2.5 litres (max height of bottle 350mm & Dia 130 mm)
Linearity Check	± 0.010 mm with slip gauge
Foot reset	Adjustable
Arm	Adjustable flexible arm

Comes with height adjusting knob to adjust the height of gauge. Highly accurate and reliable instrument to measure the Perpendicularity of Bottles/Containers.

Thank you customers for choosing us as your partners in growth !



\*All the above logos are the sole property of their respective owners and are used purely for depiction purposes only.

### OUR OTHER PRODUCTS :-



### Head Office : Presto Stantest Private Limited

I-42, DLF Industrial Area Phase-I, Delhi Mathura Road, Faridabad 121003, Haryana, India  
 P : +91 129 4272727 E : info@prestogroup.com

### Branches :

#### Mumbai

503-504B, Fair link Centre, Opp. Fame Adlab  
 Behind Mongini's Off Link Road  
 Andheri (West), Mumbai 400058  
 P : +91 022 42957052, 42957053  
 E : west@prestogroup.com

#### Kolkata

93, 3<sup>rd</sup> Floor, Karnani Estate  
 209, A.J.C. Bose Road  
 Kolkata-700017. West Bengal  
 P : +91 033 40612012  
 E : east@prestogroup.com

#### Chennai

A-3, First Floor, Sri Sathya Sai Building  
 755, Poonamallee High Road, Kilpauk  
 Chennai- 600 010. Tamil Nadu  
 P : +91 044 43865260, 43838372  
 E : south@prestogroup.com

