



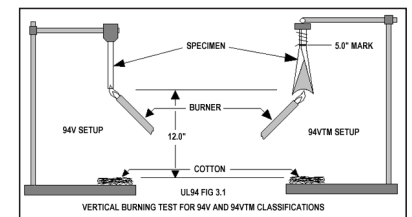

Flammability Tester (UL-94)

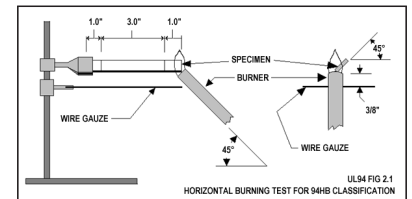

Model No. PFT - UL-94

Flammability Tester UL94 intends this standard to serve as a preliminary indication of a plastics acceptability for use as part of a device or appliance with respect to its flammability. It is not intended to reflect the hazards of a material under actual fire conditions.

UL 94 flammability testing is the first step toward obtaining a plastic recognition and subsequent listing in the "Plastics Recognized Component Directory" (former known as "Yellow Cards"). UL 94 contains the following tests: 94HB, 94V, 94VTM, 94-5V, 94HBF, 94HF and Radiant Panel.

The following is a brief description of three tests that apply to stock shape products (sheet, rod, tube and film) and how the rating system works. This is not meant as a procedure for running the tests nor as a way of determining the acceptability of a material for a particular application.





Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India
P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com



- Faridabad • Sonipat • Kolkata • Mumbai • Pune • Ahmedabad
- Chennai • Bangalore • Hyderabad

www.prestogroup.com

Key Specifications:

Display	Digital 7 Segment
Distance between Burner & Specimen	10mm ± 1mm
Specimen Size	Horizontal Burning Test - 1/2"X5" Vertical Burning Test - 1/2"X5" Vertical Burning Test Thin Material 8"X2"
Accuracy	± 2% at full range.
Power	220V, Single phase, 50 Hz
Specimen Holder Angle	45° & 90°
Digital Timer Range	999.9 Second
Digital Timer Least Count	0.1 second
Igniting Flame Length	20mm ± 1

Highlights:

Flame Auto Stop	Yes
Material	Stainless Steel
Specimen Holder	1 set
Wire Gauge	Yes
Test type	Horizontal Annex A or Vertical Annex B

* Horizontal/ vertical orientation to be selected during ordering. Single orientation available in one chamber

* LPG Empty Cylinder, Regulator, Pipe & Dust Collector Tray not a part of supply

Optional

Flammability Tester with Various Standard ASTM-D1230, ISO 3795 & FMVSS 302 also available on request

Thank you customers for choosing us as your partners in growth !



*All the above logos are the sole property of their respective owners and are used purely for depiction purposes only.

OUR OTHER PRODUCTS :-

					
Hot Air Oven Prima	Humidity Chamber	Paint Impact Tester Direct / In-direct	Salt Spray Chamber Korrox - III	Scratch Hardness Tester Motorised	Tensile Testing Machine

