



Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India
P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com

- Faridabad • Kolkata • Mumbai • Pune • Ahmedabad
- Chennai • Bangalore • Hyderabad



**MOST
ADVANCED
& STABLE
INSTRUMENTS
IN INDIA**

Peel Strength Tester Digital cum Computerised (Wintest)




Model No. PPSS-2000 (C) Wintest

Peel Strength Tester Digital cum Computerised is a consistent tool to quantify the permanence of adhesion or peel ability of self-adhesive pressure sensitive materials. PRESTO Peel Adhesion Tester is manufactured under test standard ASTM D 903.

Available in Digital model also.


- Microprocessor based display for accurate test results
- Display for Peel Adhesive strength of test specimen
- Highly accurate test results
- Strong gripping clamps to perform Peel test at 180°.
- Bright LED display
- Inbuilt calibration facility

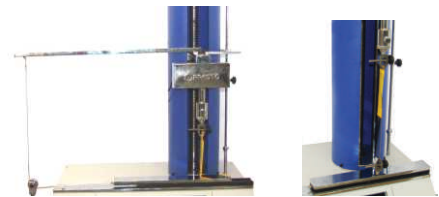

90° fixture

180° fixture

- 90 degree fixture (Optional) - Available on request

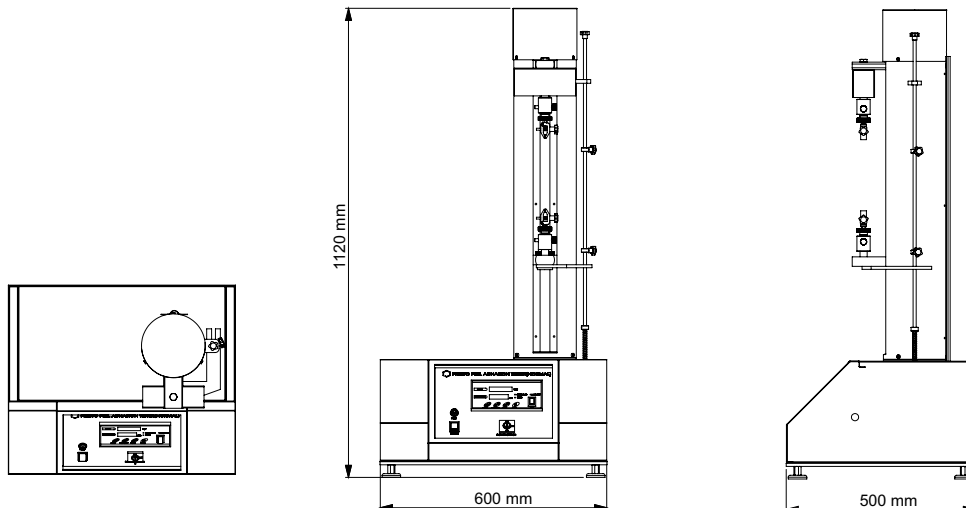

Top View

Front View

Side View



Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India
 P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com

- Faridabad • Kolkata • Mumbai • Pune • Ahmedabad
- Chennai • Bangalore • Hyderabad



Peel Strength Tester reveals the peeling strength force required to remove pressure sensitive coated material, which has been applied to standard test specimen under specified conditions from the plate at a specified angle and speed.

Key Specifications:

| | |
|------------------------|---|
| Load Cell Capacity | 20 Kgf |
| Display | <ul style="list-style-type: none"> • LCD (Digital) • Graphical report |
| Accuracy | ± 0.5 % at full load (with master load) |
| Least Count/Resolution | 0.005 Kgf |
| Power | 220V , Single phase, 50 Hz |
| Test Speed | 300 mm/min ± 5% |
| Test Report | 10 Sample save in Single Report |
| Grip Separation | Min. 25 mm & Max. 300 mm |
| Communication port | RS 232 |

Feature :

- Feather touch controls
- Easy Data Management. User can create product identification, test details etc.
- Graph test report is Force Vs Time.
- 10 Sample test reports can be seen on one report
- Email facility of report
- Report available in Pdf format
- Data can be tabulated in excel format
- Pass/Fail Criteria can be programmed
- Inbuilt hardware/software CD

Highlights:

| | |
|---------------|--|
| Safety Switch | Yes |
| Material | Mild Steel |
| Finish | Powder coated Havel Gray & Blue combination finish and bright chrome / zinc plating for corrosion resistant finish |
| Dimensions | 600x500x1120 mm |

* Computer & Printer not a part of the supply

Optional Features :

- Peel Tester Digital cum computerized models and Digital model (with or without printer facility) also available.
- VFD drive multi-speed facility also available (30-300 mm / min.)

Thank you customers for choosing us as your partners in growth !



*All the above logos are the sole property of their respective owners and are used purely for depiction purposes only.

OUR OTHER PRODUCTS :-

